



Volvo XC40 ab 2017



Part Number: 10068s-a

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben


- | | |
|--|---|
| GB Car darkening set doors
Installation Instruction | N Bilvinduet missfarging dører
Installasjonsveiledning |
| D Autoscheibenverdunklung Türen
Einbauanleitung | S Bilrutan nyanserings dörrar
Monteringsanvisning |
| E Ventana de coche puertas de tintado
Instrucciones de instalación | SF Auton ikkunasta sävytystä ovet
Asennusohjeet |
| F Portes teinter fenêtre de voiture
Instructions d'installation | CZ Okno auto tónování dveře
Pokyny k instalaci |
| I Finestrino della macchina porte colorazione
Istruzioni per l'installazione | H Autó Ablakszínezés ajtók
Szerelési útmutató |
| P Portas tintométrico janelas do carro
Instruções de instalação | PL Drzwi okienne samochodów barwiących
Instrukcje instalacji |
| NL Auto raam verven deuren
Installatie-instructies | GR Παράθυρο του αυτοκινήτου πόρτες χρωματισμού
Οδηγίες εγκατάστασης |
| DK Bil vindue toning døre
Monteringsvejledning | RUS Окрашивание двери окна автомобиля
Инструкция по монтажу |



2 x




4 x




SC1-50

4 x

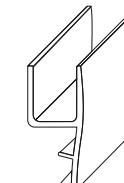

SC2-50

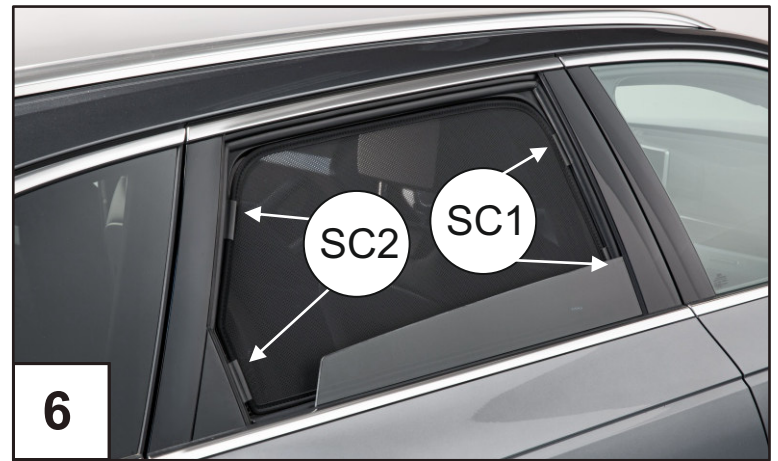

Volvo XC40 ab 2017



Part Number: 10068s-b

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

GB Car darkening set side windows Installation Instruction	N Missfarging sidevindu bilvindu Installasjonsveiledning
D Autoscheibenverdunklung Seitenfenster Einbauanleitung	S Nyanseringssidor bilfönster Monteringsanvisning
E Ventana lateral teñidos de ventana de coche Instrucciones de instalación	SF Auton ikkuna sävytystä sivuikkunan Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování side Pokyny k instalaci
I Finestra laterale colorazione della finestra di automobile Istruzioni per l'installazione	H Autó Ablakszínezés oldalablak Szerelési útmutató
P Janela lateral tintométrico janela do carro Instruções de instalação	PL Okno boczne okno barwienia samochod Instrukcje instalacji
NL Auto raam verven zijruit Installatie-instructies	GR Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου Οδηγίες εγκατάστασης
DK Bil vindue vindue toning side Monteringsvejledning	RUS Сторона тонировка стекла Автостекло Инструкция по монтажу




2 x




2 x



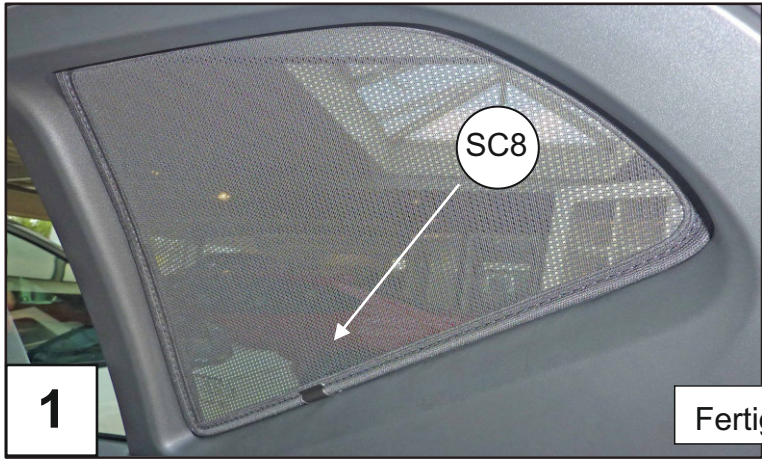

Fertig ✓

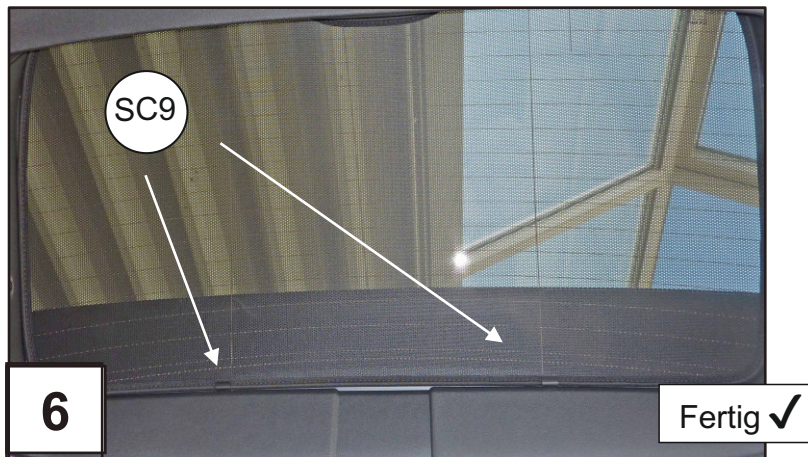

Volvo XC40 ab 2017

ClimAir
Car Comfort

Part Number: 10068s-c

Date: 19-12-2019

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH


GB Car darkening set rear window Installation Instruction	N Bilvinduet vindu missfarging bak Installasjonsveiledning
D Autoscheibenverdunklung Heckfenster Einbauanleitung	S Bilfönstret nyanser bakruta Monteringsanvisning
E Teñido de ventana trasera ventanilla del coche Instrucciones de instalación	SF Auton ikkuna sävytystä takalasin Asennusohjeet
F Fenêtre arrière teinter fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování zadních Pokyny k instalaci
I Finestra colorazione lunotto auto Istruzioni per l'installazione	H Autó Ablakszínezés hátsó ablak Szerelési útmutató
P Tingimento de janela traseira janela do carro Instruções de instalação	PL Okna samochodu tylnie okno barwienia Instrukcje instalacji
NL Autoruit raam verven achter Installatie-instructies	GR Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω Οδηγίες εγκατάστασης
DK Vindue toning bageste bil vindue Monteringsvejledning	RUS Окна автомобиля тонировка заднего стекла Инструкция по монтажу



1 x



2 x

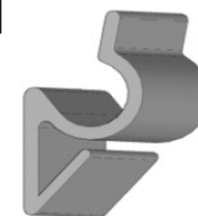

SC9-20

