


# Installation Manual

AUDI A3 5DR  
AU-A3-5-A-18



## COMPONENTS INCLUDED

## SHADES

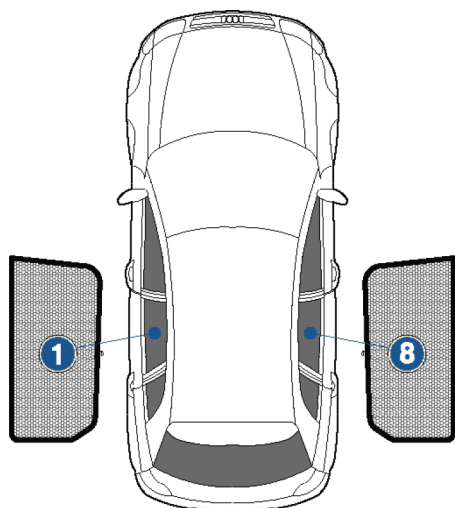

1+8

## FIXING CLIPS



CL-P03 x 2



CL-W01 x 1




CL-A01 x 1



# Side Shade Installation

AUDI A3 5DR  
AU-A3-5-A-18

COMPONENTS NEEDED:

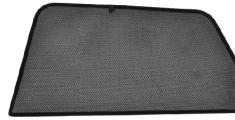

1+8



CL-P03 x 2

## STEP #1

CLEAN THE AREA WHERE CLIPS ARE TO BE MOUNTED (AS IN STEP 2) WITH THE SURFACE CLEANER AND ADHESION PROMOTER SACHET PROVIDED




## STEP #2

PRESS THE CLIPS FIRMLY INTO PLACE AND ALLOW TO DRY FOR 20 MINUTES



## STEP #3

POSITION THE SIDE SHADES

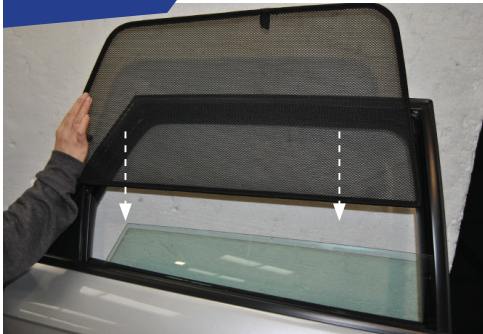

## STEP #4

ATTACH THE SHADES TO THE CLIPS



## STEP #5

ENSURE SECURELY FITTED IN PLACE



**CAR**  
SHADES