

Installation Manual

BMW 4 SERIES 2DR COUPE
BMW-4SER-2-A-18



COMPONENTS INCLUDED



x 2

FIXING CLIPS



CL-M12 x 2



Installation

BMW 4 SERIES 2DR COUPE

BMW-4SER-2-A-18

COMPONENTS NEEDED:



SIDE SHADE INSTALLATION

STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

POSITION THE SIDE SHADE




STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

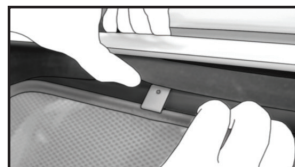

STEP #4

ENSURE SECURELY FITTED IN PLACE

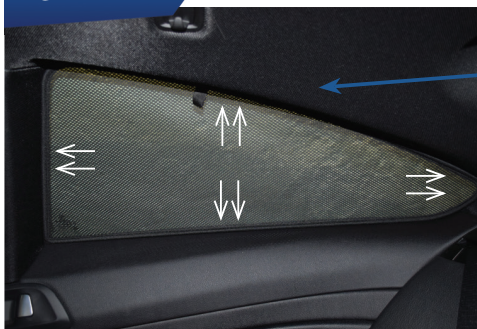

CAR
SHADES