

Installation Manual

SKODA SUPERB 5DR
SKO-SUPE-5-C-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M11 x 6



CL-M03 x 2




CL-T01 x 1



Side Shade Installation

SKODA SUPERB 5DR
SKO-SUPE-5-C-18

COMPONENTS NEEDED:

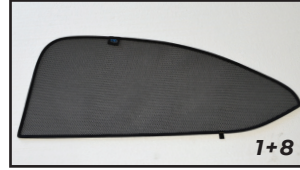

-  CL-M11 x 6
-  CL-M03 x 2
-  CL-T01 x 1

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #2

ATTACH CLIPS ON SHADE EDGE



STEP #3

POSITION THE SIDE SHADE



STEP #4

ATTACH SIDE SHADE BEHIND CLIPS



STEP #5

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES